



# Descaler

## Automatic Glass Wash Machine Cleaner

**Cleans and removes scale from glass wash machines**

**Controls water scale, body fats and bacteria**

**Ultra low foaming**

**Descaler** is a specialised blend of ultra low foaming detergents and a controlled balance of surface safe acids.

**Descaler** is formulated to exact minimum concentration to ensure the maximum cleaning effect.

### **Directions for use:**

Drain the machine down, refill with clean water and pour 200ml of **Descaler** into the machine's water well. Run 3 full cycles then drain and refill the well with clean water. Do not put glassware in the machine until this cleaning operation is complete.

Remove the chemical feed pipe from the Glasswash detergent drum and drain out the detergent. Place the chemical feed pipe into a container of **Descaler** so that it will be drawn through the detergent feed system. Run several full wash cycles to clean the machine.

Once the required level of cleanliness is reached remove the chemical feed pipe from the **Descaler**, drain, then rinse with clean water before returning it to the detergent drum.

Run 3 more wash cycles to draw the detergent through. Do not put glassware in the machine until the cleaning process is complete.

N.B. Only use **Descaler** if Nelson detergents are used through the machine or if advised